


# ***TÖYÖTÖMI***

## **PORTABLE KEROSENE HEATER OPERATION AND MAINTENANCE INSTRUCTIONS**

**MODEL KS-47B**

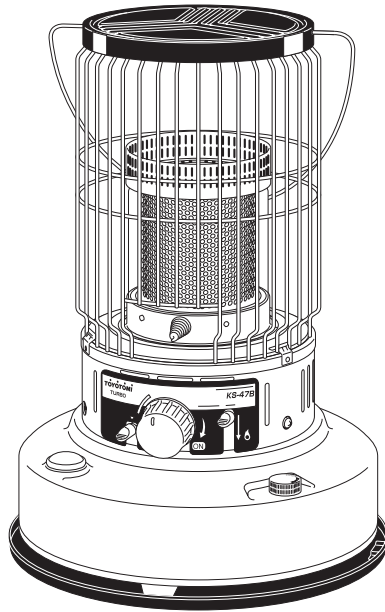

### IMPORTANT

READ AND UNDERSTAND INSTRUCTIONS BEFORE USING HEATER.  
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

### **CONTENTS**

SAFETY TIPS .....	1	ASSEMBLY AND OPERATION .....	6
FUEL GUIDE .....	3	CARE AND MAINTENANCE .....	11
OPERATING CONTROLS AND FEATURES .....	4	REPLACEMENT OF PARTS .....	12
SPECIFICATIONS .....	5	STORAGE .....	15
COMPONENT PARTS .....	5	TROUBLESHOOTING .....	16



Congratulations; you are ready to begin enjoying the benefits of one of the most advanced kerosene (paraffin) heaters ever made. TOYOTOMI, the leader in kerosene (paraffin) heater technology, has tested and refined the KS-47B to assure you of long-term safety and satisfaction. Please study the following instructions, use and care for your heater carefully, and it will serve you well for many years.


## SAFETY TIPS

**BEFORE OPERATING YOUR HEATER, PLEASE review these safety tips:**

### WARNING

#### RISK OF EXPLOSION

1. Never use any fuel other than clean kerosene (paraffin).  
Never use gasoline (petrol). Use of gasoline (petrol) can lead to uncontrollable flames resulting in a destructive fire. Even kerosene (paraffin) contaminated with small amounts of gasoline (petrol), or similarly volatile materials, can be hazardous. Never use for kerosene (paraffin) a can that has previously been used for gasoline (petrol), paint thinner, or solvents.
2. Never refill heater fuel tank when heater is operating or still hot. To do so may cause a "flash back" of flame to the fuel container, resulting in injury to yourself and your property.
3. Never use heater in areas where flammable vapors or gases may be present.  
Especially avoid use of heater where gasoline (petrol), naphtha, acetone or other volatile solvents are in the air, or whose containers are open. Such vapors could be ignited by the heater, resulting in fire and/or explosion.
4. Never fill heater fuel tank in living space. Fill heater tank outdoors. Never overfill your heater. Always replace heater tank cap securely after refueling. Spillage of kerosene (paraffin) produces strong odor which is hard to remove. Spillage on carpet can be ignited if match or some other ignition source contacts it.
5. Never store or transport kerosene (paraffin) in other than a metal or plastic container that is (1) acceptable for kerosene (paraffin), (2) non-red in color, and (3) clearly marked, "KEROSENE (PARAFFIN)". Never store kerosene (paraffin) in the living space. Picking up a gasoline (petrol) can by mistake when fueling is a major cause of heater fires.

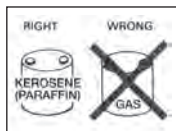

### WARNING

#### RISK OF BURNS OR FIRE

1. Observe the heater carefully for fifteen to twenty (15-20) minutes after start-up. Problems of improper adjustment of wick height or improperly seated heat chamber should become evident during this warm up period.  
NOTE: Carefully follow the instructions for lighting and adjusting the flame.
2. Due to high surface temperatures, keep away from children, furniture and clothing.



3. Do not operate heater without protective guards completely attached.



4. Do not use heater to heat or boil water or as a cooking appliance. Do not place cooking utensils, tea kettles or any other object on top of heater while in operation.



5. To avoid possible burns or fire, do not move, refuel or attempt to service your heater while it is burning or still hot. If the heater is dropped while it is burning, fuel spillage and flames outside the heater may occur.



6. Do not operate heater less than 90cm (3 feet) from walls, draperies, clothing, or furniture. The operation of any heating appliance too close to such materials could cause them to ignite, possibly resulting in a serious fire.



7. To avoid unstable burning, do not operate your heater in areas exposed to strong drafts. Do not operate heater in high-traffic areas such as doorways or hallways where it may be touched, jarred or tipped accidentally.



8. Do not operate heater in direct sunlight to avoid overheating, which may cause abnormal flame behavior. Do not allow room temperature to go above 30°C. If the room temperature exceeds 30°C the flame may increase, thereby producing smoke.




9. Before fueling, going out, or at bedtime, always turn the heater off, making sure the wick is in its lowest position (see Extinguishing the Flame on page 10) and flame is completely extinguished.

## WARNING

### RISK OF INDOOR AIR POLLUTION

Use heater only in well-ventilated areas. People with breathing problems should consult a physician before using the heater.

*"In a house of typical construction, that is, one that is not of unusually tight construction due to heavy insulation and tight seals against air infiltration, an adequate supply of air for combustion and ventilation is provided through infiltration. However, if the heater is used in a small room where less than 5.7m<sup>3</sup> (200 cubic feet) of air space is provided for each 250kcal (1,000BTU) per hour of heater rating (considering the maximum burner adjustment), the door(s) to adjacent room(s) should be kept open or a window to the outside should be opened at least 25.4mm to guard against potential buildup of indoor air pollution. Do not use the heater in a bathroom or any other small room with the door closed."*

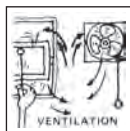

# FUEL GUIDE

The TOYOTOMI KS-47B is designed for use with high-quality kerosene (paraffin) only. Use of low-quality kerosene (paraffin) will cause wick performance to drop, leading to "low flame" and "odor problem" conditions. Purchase only kerosene (paraffin) in non-red cans reserved exclusively for kerosene (paraffin) and marked accordingly with the word "KEROSENE (PARAFFIN)". Always store your kerosene (paraffin) in a separate area from where you store gasoline (petrol) for your power equipment, to avoid accidental use of gasoline (petrol) in your heater.

## What to Buy...

- ALWAYS: Crystal clear, colorless, high quality KEROSENE (PARAFFIN).
- ALWAYS: Kerosene (paraffin) free of contaminants, water or cloudiness.
- NEVER: Gasoline (petrol), alcohol, white gas, camp stove fuel or additives.
- NEVER: Yellow or sour-smelling fuel.



## How to Use It...

- ALWAYS: Fill heater away from living quarters when heater is cool; use siphon.
- ALWAYS: Check wick frequently for tar build-up. (Rapid, heavy build-up may indicate poor quality or deteriorated fuel.)
- ALWAYS: Watch fuel gauge to avoid over-filling heater.



## How to Store It...

- ALWAYS: In a clean container, clearly marked KEROSENE (PARAFFIN).
- ALWAYS: AWAY FROM direct sunlight, heat sources or extreme temperature changes.
- NEVER: In a glass container, or one that has been used for other fuels.
- NEVER: For longer than 6 months. (Begin each heating season with fresh kerosene (paraffin); discard at the end of the season.)



## Why It is Important...

Pure, clean kerosene (paraffin) is essential for safe and efficient heater operation. Poor quality or contaminated kerosene (paraffin) can cause:

- Low flame
- Excess tar deposits on the wick
- Reduced wick life
- Odor, smoke
- Difficulty in igniting or extinguishing flame

Use of a highly volatile flammable fuel such as gasoline (petrol) can produce uncontrollable flames, creating a severe fire hazard.




## CAUTION

Flames observed emerging from the heater body are a clear indication that fuel is dangerously contaminated with gasoline (petrol) or other highly flammable material. If this occurs,

- a. Never attempt to move the heater.
- b. Call the Fire Department.
- c. Use only a class "B" fire extinguisher.
- d. Never throw water directly on a burning heater.

# OPERATING CONTROLS AND FEATURES

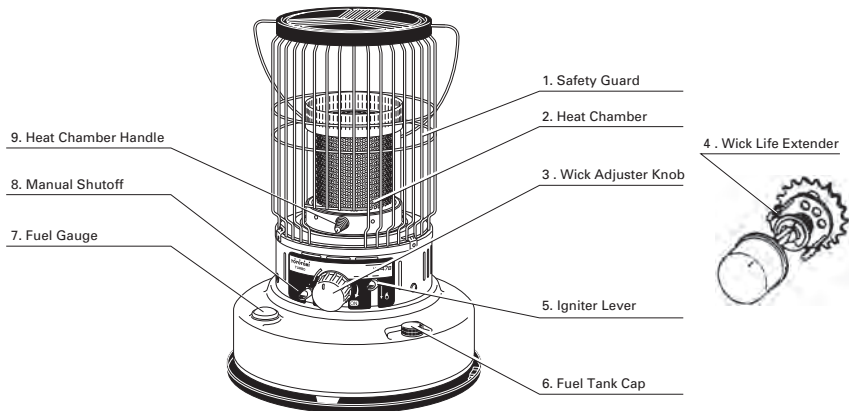

1. **Safety Guard:** Prevents direct touch on the heat chamber, greatly reducing the possibility of accidental contact burns to the heat chamber.
2. **Heat Chamber:** Permits adjustment of heat output without increasing unwanted combustion materials or reducing combustion efficiency. This feature increases comfort and convenience while maximizing fuel savings.
3. **Wick Adjuster Knob:** Used to raise and lower wick for heat output adjustment. To extinguish flame turn knob counterclockwise.
4. **Wick Life Extender:** Helps maintain good wick performance.
5. **Igniter Lever:** Battery-powered electrical igniter is brought in contact with to ignite fuel at start-up.  
NOTE: Lever should be pushed down gently.
6. **Fuel Tank Cap:** Covers filling port of fuel tank.  
NOTE: Wipe away any spilled kerosene (paraffin) from tank after filling.
7. **Fuel Gauge:** Indicates fuel level in tank.  
NOTE: Never fill beyond black line.
8. **Manual Shutoff:** Used to rapidly retract wick and extinguish flame.  
NOTE: To avoid odor and smoke, do not use routinely to turn heater off. This manual shutoff is not effective when gasoline (petrol), gasoline (petrol)-contaminated kerosene (paraffin), or other highly flammable fuels are used in the heater.
9. **Heat Chamber Handle:** Used to check and insure proper seating of the heat chamber after ignition. Improper seating of the heat chamber will cause erratic flame and smoke.

# SPECIFICATIONS


TOYOTOMI Portable Kerosene (paraffin) Heater Model KS-47B

Heat rating	4,600kcal/18,200BTU/h
Fuel tank capacity	7.5 liters
Burning time/tank*	15 Hours
Size(W x D x H)	440 x 440 x 582mm
Weight	12kg
Igniter	Automatic, powered by two (2) "C" size batteries

\* Depending on wick setting, condition and fuel quality.

## COMPONENT PARTS

REF#	PART NAME
1.	Guard assembly
2.	Carrying handle
3.	Top plate
4.	Heat chamber assembly
5.	Glass cylinder
6.	Push ring
7.	Cross pin
8.	Guard retainer
9.	Screw
10.	Wick adjuster with pendulum assembly
11.	Pendulum assembly
12.	Wick adjuster knob
13.	Screw 1A
14.	Wing nut
15.	Igniter unit
16.	Igniter coil
17.	Screw 3E
18.	Battery holder
19.	Screw
20.	Wick sleeve
21.	Glass fiber wick
22.	Rubber packing
23.	Fuel tank assembly
24.	Fuel gauge
25.	Fuel tank cap
26.	Primary air tube cover
27.	Screw 1S
28.	Reflector
29.	Under Outer Cover
30.	Drip tray
31.	Manual fuel siphon

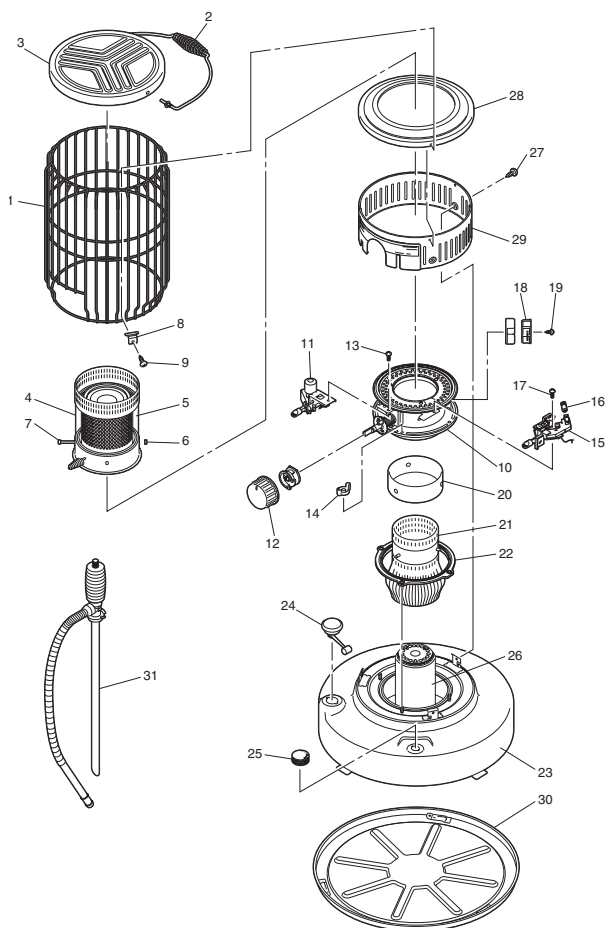

# ASSEMBLY AND OPERATION

## INSPECTION AND ASSEMBLY



NOTE: Save the shipping carton and packing materials for future storage of your heater.

### 1. REMOVE PACKING MATERIALS

Remove all packing materials from your heater and install the guard as follows:

**CAUTION:** Risk of burns. Do not operate heater without guard completely attached.

- a) Remove the carrying handle, top plate and packing materials.
- b) Replace the top plate and install carrying handle by inserting end of carrying handle to the guard as per illustration.

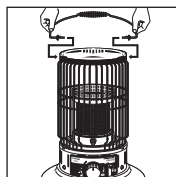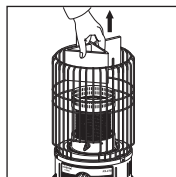


### 2. INSTALL DRIP TRAY

NOTE: DO NOT operate your heater without the drip tray.

Place the drip tray on the floor.

- Place the heater on the drip tray.
- Turn the heater clockwise until the feet slide into their tabs.

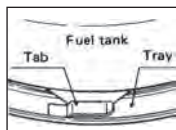


### 3. CHECK SCREWS

Make sure that the three (3) screws around the guard above the fuel tank are tight.

### 4. INSTALL BATTERIES

Insert the two (2) C size batteries according to the plus (+) and minus (-) markings inside the holder.





# FUELING

**WARNING:** Use only clean Kerosene (paraffin).  
Never use gasoline (petrol) or other flammable liquids.  
ALWAYS extinguish heater before refill heater fuel tank.  
Fuel heater outside the living area.


1. Insert the straight tube of the manual fuel siphon into the kerosene (paraffin) container. Remove the fuel tank cap on the heater, and insert the siphon's flexible hose into the fuel tank opening.

2. Turn the air vent knob on the top of the siphon clockwise to close the air vent.


3. To start the flow of kerosene (paraffin), squeeze the bulb of the siphon vigorously six or seven times. Once the flow begins, it is no longer necessary to squeeze the bulb. To avoid overfilling the tank, watch the fuel gauge. As the indicator enters the red zone, stop the flow by turning the air vent knob counterclockwise.

**NOTE:** Be especially careful to avoid overfilling the tank with very cold kerosene; otherwise overflow might occur when the fuel warms up.

4. Remove the siphon carefully, allowing the excess kerosene (paraffin) to drain from the tube back into container. Replace the fuel tank cap and tighten it securely. Be sure to wipe away any spilled kerosene (paraffin) from tank or other heater parts.

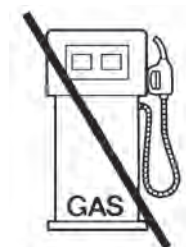


USE KEROSENE ONLY  
(PARAFFIN)

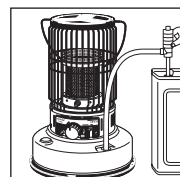

# CHECK BEFORE LIGHTING

## 1. LOCATE YOUR HEATER AWAY FROM WALLS AND AVOID DRAFTS

Allow at least three 90cm of clearance between the heater and walls, curtains, shelving or other combustible materials. Do not operate your heater in drafty areas or locations where opening doors may create gusts of air. Drafts or strong air currents may make flame unstable and affect heater performance.

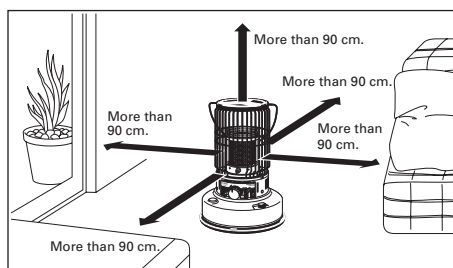


## 2. LEVEL THE HEATER

The heater should be operated on a firm, level floor.

**NOTE:** If your heater is not level, change locations. Do not attempt to prop it up with books or other objects. An unlevel heater may burn with an uneven flame.


### 3. CHECK THE WICK LIFE EXTENDER

On your first use of new heater or after replacing the wick, check if the WICK LIFE EXTENDER is on position ①. If not, relocate the WICK LIFE EXTENDER to position ① by following the instructions on page 9, ADJUSTMENT OF WICK HEIGHT WITH WICK LIFE EXTENDER.

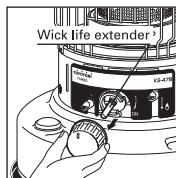

### 4. ENGAGE THE AUTOMATIC EXTINGUISHER

The automatic extinguisher is engaged automatically by turning the wick adjuster knob clockwise. Check the operation of the automatic extinguisher before lighting your heater. After turning the wick adjuster knob clockwise until it stops, turn the manual shutoff counterclockwise to be sure the wick moves smoothly down.

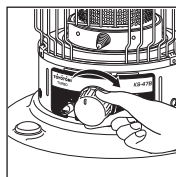


## LIGHTING

**NOTE:** When you first use your new heater, ignite it out of the living area of your house, either in a garage or an outside area protected from strong drafts. Burn it for about 15 minutes to remove all of the protective oil present on the burner parts. If this 15 minutes "burn-in" is done inside, some objectionable odor will be observed. This procedure is necessary **ONLY THE FIRST TIME** you ignite your heater.

**NOTE:** If you have fueled your heater for the first time, or if you are refueling it after it has been out of fuel for a long time, you will need to wait about thirty (30) minutes for the wick to become fully saturated before lighting. Failure to allow enough time for the wick to become fully saturated may cause permanent damage to the wick when it is lighted.


1. Turn the wick adjuster knob clockwise until it stops. This raises the wick to its maximum height. As the wick rises within the heater, the wick adjuster knob turns with some resistance and makes a sound like the winding of a clock. Once the wick has reached its proper height, the automatic extinguisher is fully engaged. The wick adjuster knob will now move freely left or right to adjust the flame.

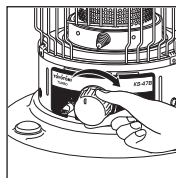

### 2. AUTOMATIC LIGHTING


Gently push down the igniter lever. The igniter coil should glow and touch the wick. When flame appears, release the igniter lever.

**NOTE:** If you have difficulty igniting wick, let up on the igniter lever very slightly to remove the igniter coil from direct contact with the wick.

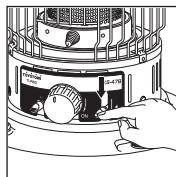


### 3. LIGHTING WITH A MATCH

Tilt the heat chamber and touch the match to the top of the wick. Do not allow burned parts of the match to fall or remain on the wick.

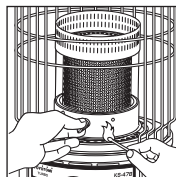

4. Be sure that heat chamber is properly seated by moving the wire heat chamber handle left and right.

**NOTE:** An improperly seated heat chamber can cause high flame, smoke, and potential damage to the heater itself. Proper seating of the heat chamber is essential for good performance. Do not leave the heater until you have determined that the flame is burning normally, as described in the following section.

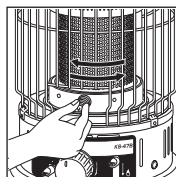


# ADJUSTING THE FLAME

1. After lighting, wait for the heat chamber to reach operating temperature.

## 2. CHECK THE FLAME LENGTH

After ten to fifteen (10-15) minutes, the entire heat chamber should be glowing red.

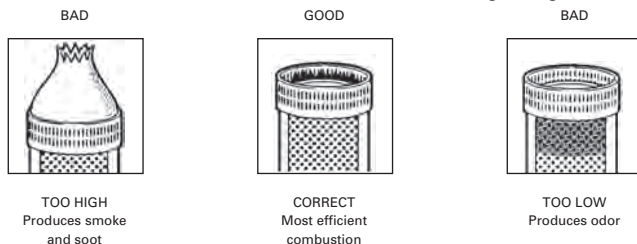

If necessary, raise or lower the wick by turning the wick adjuster knob to produce the proper flame condition.

**NOTE:** Do not operate your heater with wick set **TOO LOW** or **TOO HIGH**. Doing so will decrease combustion efficiency and increase production of unwanted emissions. When operating heater, be sure wick is high enough to keep the primary heat chamber heated to a uniform red glow from top to bottom.

**NOTE:** Always observe the heater closely for the first 15-20 minutes after it is lighted to be sure it is properly adjusted.

## 3. ADJUSTMENT OF WICK HEIGHT WITH WICK LIFE EXTENDER



Normal use of the wick and heat chamber over a period of time may make it impossible to achieve a satisfactorily high flame level. Usually this occurs because the wick develops deposits on it that retard fuel flow and evaporation. When this happens, the wick should be cleaned by “burning dry” as described in item 2, page 11 “CARE AND MAINTENANCE”.

When the “burning dry” cleaning procedure is no longer effective in restoring proper flame height, adjust the wick life extender mechanism to the next higher position.

**NOTE :** Do not move the wick life extender to a higher position unless the wick has been cleaned by “burning dry”.

To adjust the wick height rising the wick life extender, first release the automatic extinguisher by pushing down on the **MANUAL SHUTOFF**.

Then pull the wick adjuster knob from its shaft by pulling outward.

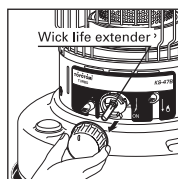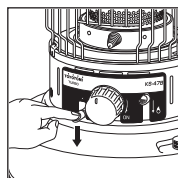

When the wick adjuster knob is removed, the wick life extender control can be seen to contain 3 sequential holes marked ①, ② and ③. By pulling out and turning the control dial counterclockwise, the stem pin of the adjuster can be moved from ① to ② and to ③ position as required. Each step upward from a lower to a higher number increases the maximum wick adjustment range by 2 mm (approx. 1/13 in.).


After the wick life extender's dial has been set, be sure the MANUAL SHUTOFF knob is in the "OFF" position. Replace the wick adjuster knob, making sure it is engaged securely on the wick adjuster shaft.

Repeat steps 1 through 3, as needed, in the section titled "ADJUSTING THE FLAME". When suitable flame length can no longer be achieved even on pin position ③, the wick should be replaced.

**NOTE :** Do not move adjuster to higher position until lower position no longer gives adequate flame length, even after "burning dry".

Before replacing wick, be sure to move the wick life extender dial back to its ① position.

CHECK THE OPERATION OF THE AUTOMATIC EXTINGUISHER BEFORE LIGHTING YOUR HEATER.

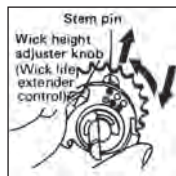

## EXTINGUISHING THE FLAME


1. Turn the wick adjuster knob counterclockwise until it stops. Within a few moments, the flame will be completely extinguished and the heater will be off.
2. Make sure the flame is out completely.
3. Do not try to relight the heater for at least three (3) minutes after turning it off, as this may cause smoke and odor.



## MANUAL SHUTOFF

When quick shutoff is necessary, push the manual shutoff down.

**NOTE:** For routine turn-off, DO NOT use the "Manual Shutoff" or activate the "Automatic Extinguisher" by jarring the heater. These methods may cause unwanted odor, soot and smoke. Only the wick adjuster knob should be used for normal shutoff.

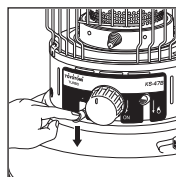

# CARE AND MAINTENANCE

As with any good appliance, preventive as well as corrective maintenance is occasionally required. Please read the following section carefully in order to enjoy the greatest benefits from your heater.

## INSPECTION OF THE WICK

**NOTE:** One of the simplest but also the most important components of your heater is the wick.

With proper attention, the wick will last at least one heating season and, depending on the quality of the fuel used, possibly longer, it helps to perform routine maintenance operations of the wick.

1. Indications that the wick may need attention are:

- low flame
- tar deposit on the top edge of the wick
- difficulty in turning the wick adjuster knob
- a flickering or dying flame

2. Clean the wick by burning dry as follows:

- 1) When the fuel gauge indicates empty, but the heater is still burning, raise the wick to its highest position and allow the flame to consume the remaining fuel in the tank.

**NOTE:** Burning the wick dry can at times create odors. For the burning dry procedure, remove your heater from the living area of your house into a well-ventilated area such as a garage or even a sheltered area outside. If you burn the wick dry outside, be sure that the heater is not exposed to strong drafts during the procedure.

- 2) After the heater has cooled completely, remove the heater cover as described in items 1 and 2 of the next section.

- 3) Remove any residue from the wick with a small brush such as an old toothbrush. Cinders or soot in the burner around the wick may be vacuumed away. Be careful when removing such material from the wick with a brush, to do so gently so as not to tear the top surface of the wick.

- 4) Remove any tar deposits on the top of wick adjuster and primary air tube using a scraper.

**NOTE:** When good wick performance is no longer achieved by the burning dry process, it may be necessary to replace the burned wick with a new one.


- 5) Before reassembling the heater, take a few minutes to wipe the parts with a soft cotton cloth or paper towels.

- 6) Reassemble the heater, following directions in item 11 of the next section.

**NOTE:** If the flame is still low after cleaning the wick, the wick may contain some water. It is then necessary to replace the wick and empty all kerosene (paraffin) from the fuel tank. Dry the tank thoroughly and refill with fresh, pure kerosene (paraffin).

## INSPECTION OF THE IGNITER COIL (EVERY TIME)

If the wick does not ignite or is hard to ignite, check if the igniter filament is broken.

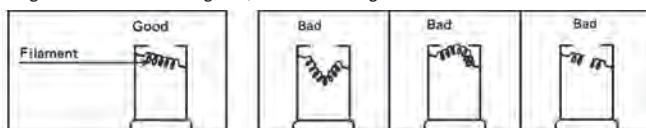

If the igniter coil is found to be defective, replace as described on page 14.


# REPLACEMENT OF PARTS

## REPLACING THE WICK



USE ONLY GENUINE TOYOTOMI "KS-47B" REPLACEMENT WICK. SUBSTITUTE WICKS CAN SEVERELY REDUCE PERFORMANCE AND SAFETY.

**WARNING:** Before disassembling your heater, allow it to cool completely.


1. Release the automatic extinguisher by pushing the manual shutoff down.

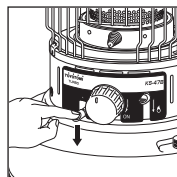


2. Remove the three (3) screws and lift cover off.

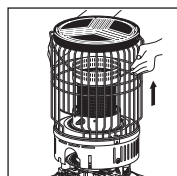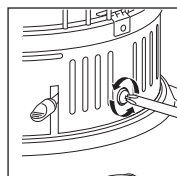

3. Remove the four (4) wing nuts around the wick adjuster. Lift the wick adjuster off the heater while moving it slightly back and forth.

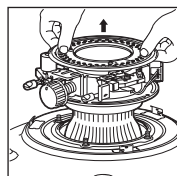


4. Slide two fingers between the orange band on the wick and the silver wick sleeve attached to the wick adjuster. Lift the pins in the wick off the slots in the wick sleeve. After lifting all three (3) pins off the slots, fold the wick and remove it. Leave the wick sleeve in place.

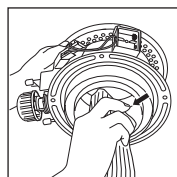


- Place the wick adjuster on its side. Next, line up the three (3) openings in the wick adjuster: 1) the holes in the sleeve, 2) the diagonal slots in the fixed part of the wick adjuster, and 3) the slots in the moving part of the wick adjuster controlled by the wick adjuster knob.


**WARNING:** NEVER replace the sleeve upside down.

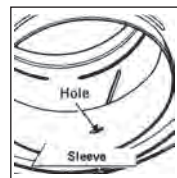

- Fold the new wick in quarters and insert it into the wick adjuster from wick adjuster bottom. Place one of the pins in one of the lined-up openings. If you experience difficulty, gently turn the wick adjuster knob clockwise. Then insert the two other pins, turning the wick adjuster knob if necessary. Do not bend the sleeve.

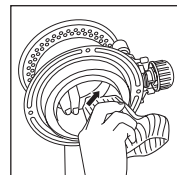


- Finally, gently press the wick, all along its circumference, against the adjuster to insure that it is firmly in place.

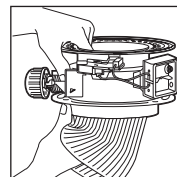


- Lower the wick adjuster into the fuel tank, guiding the tail of the wick so it fits over the primary air tube and evenly into place.

Point the wick adjuster knob to the front of the heater. Insure that the wick adjuster is centered over the studs on the fuel tank.

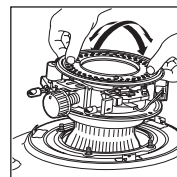


**NOTE:** The space between the wick adjuster and the primary air tube should be even all around.


**NOTE:** Make certain the top of the wick adjuster and the top of primary air tube are the same height. If they are uneven, the flames tend to be uneven, too.

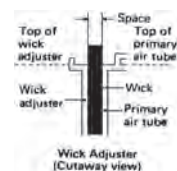

- Tighten the four (4) wing nuts around the wick adjuster.

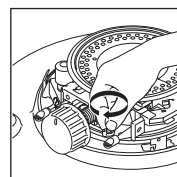

- Turn the wick adjuster knob to be sure the wick moves smoothly up and down.

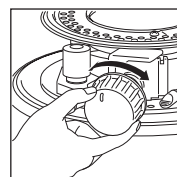

AFTER REPLACING THE WICK, CHECK THE OPERATION OF THE AUTOMATIC EXTINGUISHER.

Wick height on position ① of the wick life extender should be 8mm when wick adjuster knob is turned fully clockwise. Be sure to check.

NOTE: Remember always to start a new wick on position ① of the wick life extender.




NOTE: If wick does not move smoothly and easily, or wick height on position ① of the wick life extender is not in the range of 7-9mm do not use heater. Disassemble and repeat items 5 through 10.

NOTE: If any ragged edges appear on the top of the wick, trim them with a scissors carefully. DO NOT cut the body of the wick.

11. Replace the heater cover on the fuel tank and secure it into position with three (3) screws.

12. Once again, check the proper operation of the automatic extinguisher.

NOTE: Before lighting a new wick for the first time, turn the wick to its lowest position and allow the wick to saturate with kerosene (paraffin) for about thirty (30) minutes.

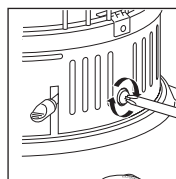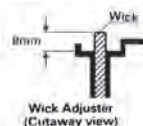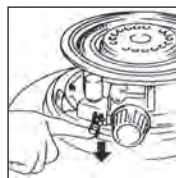

## REPLACING THE IGNITER COIL

USE ONLY GENUINE TOYOTOMI REPLACEMENT IGNITER COIL. SUBSTITUTE IGNITER COILS CAN SEVERELY REDUCE PERFORMANCE AND SAFETY.


**WARNING:** To avoid contact burns, allow your heater to cool completely before replacing the igniter.

### 1. REPLACE BATTERIES

When the igniter coil no longer glows sufficiently to light the wick, replace the batteries. If proper glow is not restored, the igniter coil may be defective.

### 2. CHANGE IGNITER COIL

- Remove the batteries from the battery holder.
- Disassemble the heater as described in items 1 and 2 of the preceding section.
- Remove the three (3) screws and heat release plate off.
- To remove the igniter coil, push it in and twist in either direction while holding the sides of the socket with your other hand.
- Install the new igniter coil by pressing it into the socket and turning.
- Make sure that the position of tumor of heat release plate to be right side as described in the illustration and tightened the three (3) screws.
- Insert the (2) batteries according to the plus (+) and minus (-) markings inside the holder.
- Reassemble the heater as described in item 11 of the preceding section.

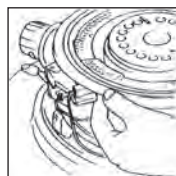



# STORAGE

At the end of each heating season, or when you do not plan to use your heater for an extended period of time, the following procedures are recommended.

## 1. CLEAN WICK AND HEATER

Follow directions in item 2 under "INSPECTION OF THE WICK".

## 2. DRAIN FUEL TANK

After you have burned your heater dry, a small amount of kerosene (paraffin) will remain in the fuel tank. It be removed in order to avoid contamination when the heater is refueled at a later date. To do this, remove the fuel cap, tip the heater toward you and insert a small syringe into the bottom-most portion of the fuel tank. Empty the tank completely before storage.

## 3. STORE HEATER

The original shipping carton is the best place to store your heater. If you do not have original packing materials, cover the heater with a large plastic bag and store in a dry place.

# TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION	PAGE
Wick fails to ignite	Out of fuel	Check fuel gauge; add fuel if necessary.	7
	Igniter coil does not glow	Check wire connections. Replace batteries. Replace igniter coil, if necessary.	6 11, 14
	Water in kerosene (paraffin)/ poor quality kerosene (paraffin)	Drain tank. Install new wick. Refill with fresh and clean kerosene (paraffin).	12
Smoke or odor	Heat chamber tilted or improperly seated	Move wire handle until heat chamber is properly seated and moves smoothly left and right.	8
	Wick set too high	Reduce wick height by turning wick adjuster knob counterclockwise. Check position of the wick life extender.	9
	Dirty wick	Clean wick as described under "Care and Maintenance".	11
	Drafts	Relocate heater.	2
	Contaminated fuel/poor quality kerosene (paraffin)	Drain tank and rinse with clean kerosene (paraffin). Install new wick and refill with fresh and clean kerosene (paraffin).	11 12
Flickering, dying or low flame	Dirty wick	Clean wick as described under "Care and Maintenance". If necessary, install new wick.	11 12
		Drain tank and rinse with clean kerosene (paraffin). Install new wick and refill with fresh, clean kerosene (paraffin).	11 12
	Water in kerosene (paraffin)/ poor quality kerosene (paraffin)	Drain tank and rinse with clean kerosene (paraffin). Install new wick and refill with fresh, clean kerosene (paraffin).	11 12
	Wick too low to sustain good flame	Replace the wick life extender to step ② or ③. If already at step ③, replace wick.	9,12
Wick adjuster knob is hard to turn	Dirty wick	Clean wick as described under "Care and Maintenance".	11
	Poor quality kerosene (paraffin)	Drain tank and rinse with clean kerosene (paraffin). Install new wick and refill with fresh, clean kerosene (paraffin).	11 12
	Damaged mechanism	Contact your dealer for service.	
Flame too high	Fuel contaminated with gasoline or other highly flammable material	IMMEDIATELY shut off heater. Inspect all components for damage. Drain tank and rinse with clean kerosene (paraffin). Install new wick and refill tank with fresh, clean kerosene (paraffin).	3 11 12
	Wick set too high	Check the position of the wick life extender.	9



***TOYOTOMI***

**TOYOTOMI CO., LTD.**

5-17, Momozono-cho, Mizuho-ku, Nagoya, Japan

Rev. 08/14

Printed in Japan  
0551000902